


REMINGTON®
EST. NEW YORK 1937



**Delicates and Body Hair Trimmer
BHT250**


 www.remington-europe.com

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.



IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Suitable for use in a bath or shower.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-0505U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

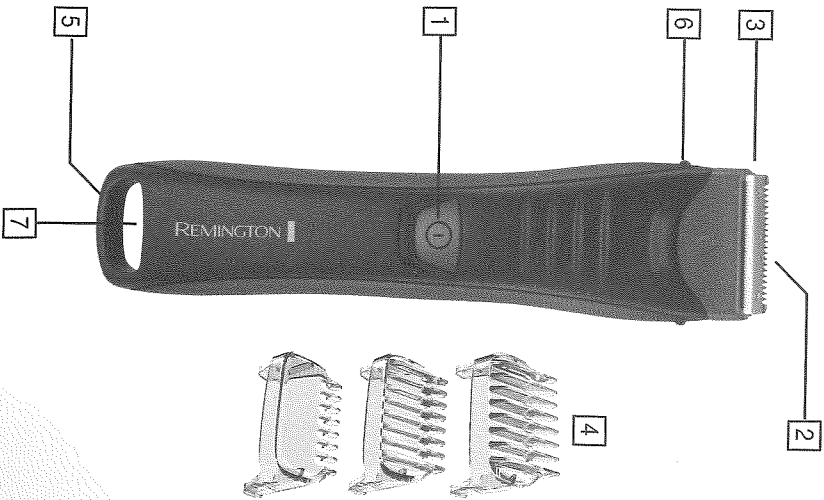

PARTS

1. On/off switch
2. Main blade
3. Detail blade
4. Fixed combs (2, 4, 6mm)
5. Hang loop
6. Washout port
7. Charging indicator
8. Adaptor (not shown)

GETTING STARTED

- Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- Connect the product to the adaptor and then to the mains.

Charge Level Indicators

Charge Level	Indicator
Charging	LED will show
Fully Charged	LED will show

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

- Switch the product on by pressing the on/off switch.
- Select the desired trim length prior to trimming by attaching one of the fixed combs.
- If trimming for the first time, always start with the longest length comb (6mm).
- Always ensure the trimmer is switched off before attaching or removing a comb.

CHANGING ATTACHMENTS

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer blade. Slide the comb down the grooves until it clicks into place.
- To remove the comb, unlock the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.
- Note: Using the detail blade side of trimmer with no combs attached will trim down to 0.2mm. Using the main trimmer blade with no combs attached will trim hair to 1mm. Holding the main blade perpendicular to the skin will trim hair to 0.4mm.

DELICATES TRIMMING

- Choose and attach the desired fixed comb.

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair in around your delicate, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.

- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- Note: Take your time when trimming the delicate area, using slow and even strokes.

BODY TRIMMING

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, in the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.

EDGING AND SHAPING OR CLOSE TRIM

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.
- Note: This trimmer has been designed so that it can be used in the shower for greater ease and convenience.
- Please do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower. Do not submerge the trimmer in water.

TIPS FOR BEST RESULTS

- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting.

 
CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- Allow water to run into and through the wash out port to help wash any hair trimmings from the inside out.
- Note: Suitable for cleaning under water.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Firstly, pry the TST (detail blade) head housing using a single-side screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Continuously pry the front housing using the single-side screwdriver.
- Pry the PCB holder assembly again using the single-side screwdriver from the back housing so you can see the PCB and batteries exposed.
- Destroy the PCB holder using a wire cutter, cut the tabs on both ends of the battery assembly and remove the PCB.
- Dispose of the batteries safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

Adapter Specifications

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-0505U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	5.0 V =
Output current	0.5 A
Output power	2.5 W
Average active efficiency	≥73.16%
Efficiency at 10%	-
No load power consumption	≤0.1W