

# IMPORTANT SAFETY INSTRUCTIONS



**READ THIS MANUAL BEFORE USING THIS APPLIANCE.**




**WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY**

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating label.
- Do not immerse the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, make sure your hands are dry & unplug the appliance immediately. Discard the appliance once safe.
- Never attempt to open the housing yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cord and the plug regularly for any possible damage. If the cord or plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug are damaged. In the case of damage dispose of responsibly.
- Never attempt to repair the appliance yourself. This could cause an electric shock.

- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- Make sure that there is no danger that the cord or extension cord can inadvertently be pulled or cause anyone to trip when in use.
- Never insert anything into any of the grills.
- Make sure that the grills on the housing are never covered.
- For indoor use only.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and /or plug may occur.
- Never leave the appliance unattended while it is in use.
- This appliance shall not be used by children from 0-8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and can understand the hazards involved. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- Never use the cord to carry the appliance - use handles to carry the appliance.

# DESCRIPTION:

1. Timer
2. Speed Selector/Switch Off/Oscillation Speed Selector
3. Fan body
4. Airflow exit grill
5. Base
6. Cord supply
7. Handle

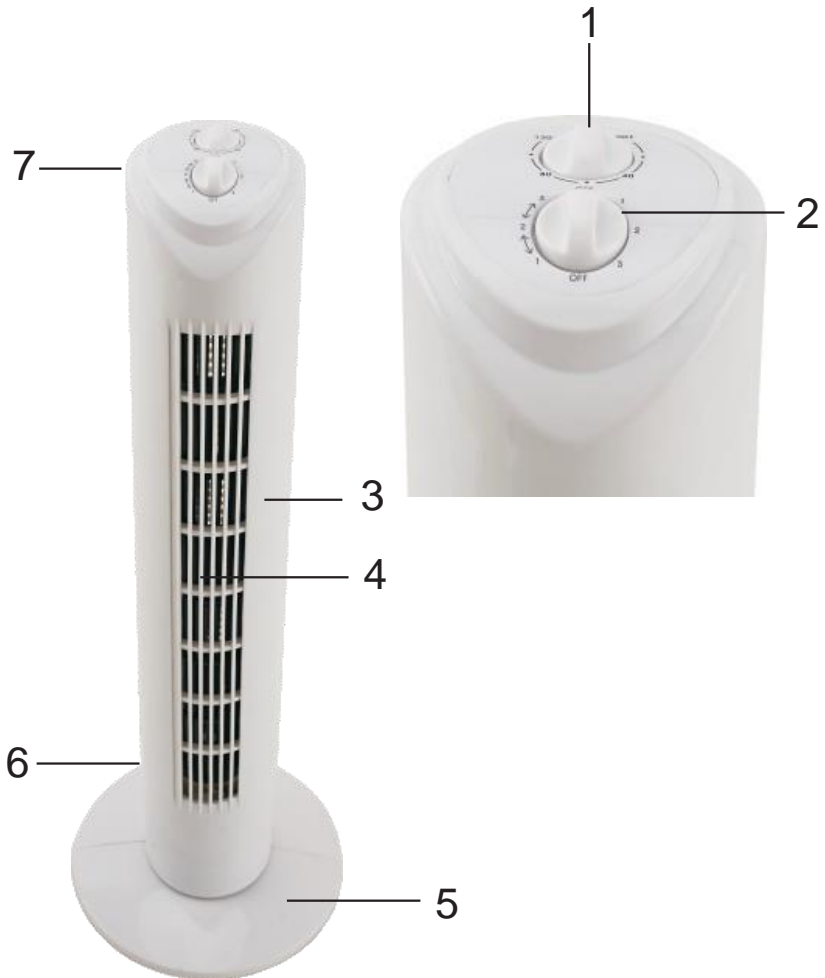

# ASSEMBLY:

**CAUTION: THE FAN SHOULD ALWAYS BE SWITCHED OFF AND UNPLUGGED FROM THE MAINS SUPPLY WHILST ASSEMBLING!**

- To attached the foot stand, set the fan gently on its head (use a soft surface so the fan is not damaged/scratched)
- Add the two halves of the stand together and set them on the housing
- Fix the foot stand with the provided screws onto the housing – make sure the cable is not clamped.
- Fix the cable into place using the supplied cable fixer with the 2 screws (see fig.1)
- Once assembled place the fan onto its base and check the Tower Fan is stable.

Pay attention that all parts are correct and firmly connected with each other.

- Never try to open or repair the fan yourself as this could result in damage to property and injury to people.



# OPERATING INSTRUCTIONS:

**CAUTION: CONNECT TO THE MAINS SUPPLY ONLY AFTER THE FAN HAS BEEN FULLY ASSEMBLED!**

- The fan must only be used standing upright with base attached on a level surface.
- Check the fan is switched off
- Insert the plug into a suitable socket outlet and switch on when ready to use.
- Turn the speed/oscillation dial to the right to select the desired speed:
- Off: Stop / 1: Low Speed / 2. Medium Speed / 3. High Speed / Off

Oscillation function: Turn the speed/oscillation dial again to: ~~1,2,3~~ and this will select the above speeds with oscillation function.

## 120 MINUTE TIMER:

- The operating time can be set up to 120 minutes duration with this function.
- Turn the timer dial clockwise to desired length of time. The unit will start when the desired speed is selected.
- When the set time has elapsed the fan will switch off automatically.
- When not using the timer or if you wish to turn off the fan before the set time has elapsed, you can switch off the fan by turning the speed dial to the OFF position and turn the timer dial to the OFF position.
- Attention: If the timer is set to position OFF the speed dial does not operate.
- Always switch off the fan when not in use and unplug the plug from the mains socket.


# CLEANING:

- Clean the Tower Fan regularly.
- Before cleaning, switch off the fan and unplug from wall socket. Never clean this fan when it is plugged in!
- Do not immerse the fan, power cord, plug or parts of the fan in water or other liquid or pour water or other liquid over the fan. Do not spray the fan with liquids.
- Do not allow any water or other liquids to enter the motor housing!
- Use a soft dry cloth to keep the fan free from dust and fluff.
- Do not use detergents, abrasive cleaning powder or polish any part of the fan as these can damage the surface finish.
- If you are not using the fan for any length of time then it is best to cover and store in a cool dry place.

## NOTE:

- This fan is for household use only.
- Never try to open or repair the fan yourself as this will invalidate the warranty and could result in damage to property and injury to people.

# PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with 3 amp fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is a Class 2 appliance protected by double and reinforced insulation and does not require earthing. Class 2 appliances are indicated by this  symbol marked on the appliance rating plate.