


INSTRUCTION MANUAL

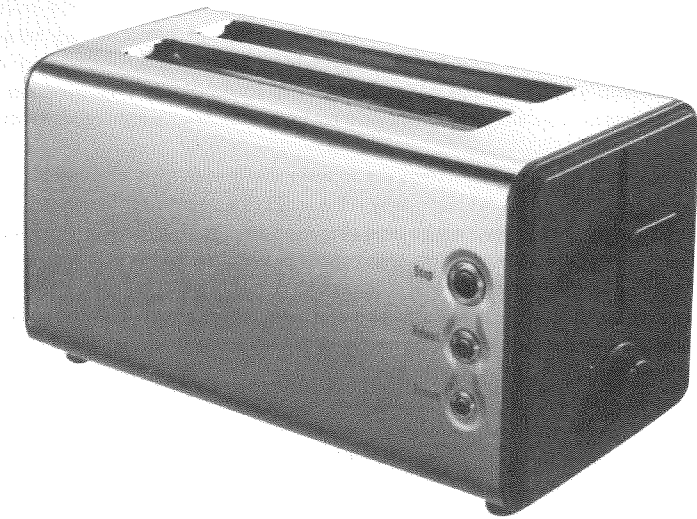

• POWER

• 220-240V AC 50/60Hz 1180-1400W

• MODLE:MAT-6011

• Ensure that the voltage indicated on the identification plate corresponds with the mains voltage.

• FITTING OF 3 PIN PLUG

WARNG-THIS APPLIANCE MUST BE EARTHED

INPORTANT: the wires in this mains lead are coloured in accordance with the following code:


As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings identifying the terminals in your plug, proceed as follow:-the wire which is coloured **green & yellow** must be connected to the terminal in the plug which is marked with the letter 'E' or the earth symbol or coloured **green** or **green & yellow**. The wire which is coloured **blue** must be connected to the terminal which is marked with the letter 'N' or coloured **black**. The wire which is coloured **brown** must be connected to the terminal which is marked with the letter 'L' or coloured **red**.

PLEASE READ CAREFULLY-ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

- Check that the mains voltage corresponds with the rating of the appliance before operating.
- Do not touch hot surfaces-Use handles or knobs.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not leave any appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or infirm persons.
- Unplug from outlet when not in use or before cleaning. Allow to cool before putting on or taking off any parts.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- To disconnect-remove the plug from the outlet. Do not pull plug out by the cord.
- Do not use this product for anything other than its intended use. This appliance is for household use only.
- No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
- Use the toaster without bread for the first time. There will be some smoke at first; this is normal.
- The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
- Bread may burn. Therefore this toaster must not be used near or below curtains and other combustible materials.
- Do not place the cable or any other object over the bread openings whilst the toaster is in operation.
- Do not attempt to dislodge food while the toaster is in operation.
- Toasting lever must be in the 'UP' position before attaching or disconnecting the plug from wall outlet.
- Do not insert metal objects or other utensils into the toaster, as this will cause an electric shock or cause a fire.
- Do not leave the toaster unattended whilst in operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.

IMPORTANT SAFEGUARDS PARTS OF YOUR TOASTER

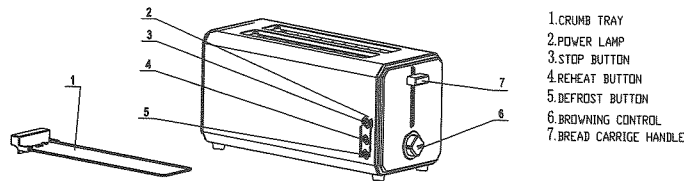

USER INSTRUCTIONS

Bread can be toasted as follows: push the plug into the socket and turn on the toaster using the bread carriage handle. Note: When using the appliance for the first time, it will emit some smoke. This is normal and it will stop by itself after a few minutes.

There are three lights on the front of the appliance:

- The stop button with power light-this light comes on automatically once the toaster is turned on. The stop button is there to prematurely stop the toasting process.
- Reheat button with indicator light the light goes on when the button is depressed. The reheat button is used to heat up the toast if it has been allowed to go cold.
- Frozen button with indicator light the light goes on when the button is depressed. The frozen button is for toasting bread directly from the freezer. By pressing the button, you can extend the toasting time by approx. 30 seconds.

Place the bread in the toaster clip. The clip can be opened by pushing together by hand. Place the clip in the toaster slot. Do not leave the toaster unattended, but stay in the vicinity to ensure the bread does not burn, because the toaster is turned off by the timer but the toast does not spring up by itself.

Experiment for yourself to find the perfect toasting time. The optimal time changes depending on the freshness of the bread, and on the other ingredients such as cheese or meats. We advise you to alternate the two toaster clips half way through the toasting process. This will ensure that the bread is evenly browned.

Do not use a knife, fork or other utensil to remove the bread from the toaster or to clean the toaster. If the bread becomes lodged in the toaster, unplug the appliance before attempting to remove it.

The top of the appliance becomes hot because metal conducts heat so well. Therefore do not touch the outside of the toaster during use and keep well out of reach of children.

CLEANING INSTRUCTIONS

FIRST UNPLUG THE CORD FROM THE SOCKET

Clean the toaster after each use. This prevents leftover food from becoming encrusted in the appliance. Let the toaster cool down after use. Remove bread remains. Take out the crumb tray at the left underside, but first remove the plug from the socket!-and remove any crumbs or pieces of bread. Clean with exterior with a damp cloth. Do not use abrasive or strong detergents. Never submerge the toaster in water or other liquid. You can clean the toast tongs and the crumb tray in soapy water. Never attempt to clean the inside of the toaster.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified in order to avoid a hazard.

The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

The appliances are not intended to be operated by means of an external timer or separate remote control system.

For toasters, they shall include details on how to remove breadcrumbs.

WEEE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

PLEASE FILL YOUR DETAILS FOR FUTURE USE

<u>GUARANTEE CARD</u>	
CUSTOMER'S DETAILS	
NAME OF BUYER	
ADDRESS	
TELEPHONE	
DETAILS OF SHOP	
NAME OF SHOP	
RECEIPT VOUCHER NO.	
DATE OF PURCHASE	
APPLIANCE DETAILS	
TYPE OF APPLIANCE	
MODEL NO.	
SERIAL NO.	