



Healthy
Living

Nutri-Q[®] Egg Cooker

Instruction Manual



Item No. 34360

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

- The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.
 - Always check the mains voltage corresponds to the voltage on the rating plate.
1. Ensure that the power supply to the socket into which the appliance is plugged in is in accordance with the rating plate found on the base of the appliance.
 2. Do not operate the appliance in the presence of any gases or combustible liquids.
 3. Do not operate in damp or humid conditions e.g. laundry room/shower/bathroom, near to a swimming pool or outdoors.
 4. Check the power cord and plug regularly for any signs of damage. If the cord or the plug is damaged they must be replaced by a qualified electrician or a service repair centre.
 5. Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and/or repair by a suitably qualified person.
 6. This appliance is intended for domestic use only. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
 7. Young children should be supervised at all times to ensure that they do not play with the appliance.

8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
9. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
10. Children of less than 3 years should be kept away unless continuously supervised.
11. Incorrect operation and use can damage the appliance and cause injury to the user.
12. Do not immerse the appliance, plug or power cord in water or any other liquid for any reason.
13. Do not let the power cord hang over the edge or a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
14. Do not allow the cord to touch hot surfaces and do not place the cord near hot gas or electric burners or in a heated oven.
15. Use of an extension cord with this appliance is not recommended.
16. Always operate this appliance on a smooth, even and stable surface. Do not place the appliance on a hot surface.
17. Always switch the appliance off and unplug from the socket when not in use. Do not pull on the cord to remove the appliances plug from the electrical socket. Never leave the appliance unattended when in use.


18. Never handle or operate the appliance with wet hands.
19. The stainless steel lid will be hot during and after use - **DO NOT TOUCH WITH BARE HANDS** as there is a risk of scalding.

OPERATING THE EGG COOKER BEFORE FIRST USE:


1. Remove appliance from packaging and check for signs of any damage.
2. Check whether the voltage indicated of the rating label is consistent with your household voltage.
3. Before first use, wash the accessories (shelf/bowl/measuring cup) with warm soapy water and dry.

USING THE MEASURING CUP


1. Before switching the appliance on please fill the egg cooker with water using the measuring cup to the required level indicated. The measuring cup gives an indication of the water level needed to cook soft, medium or hard boiled eggs. The amount of water used will also depend on how many eggs you want to cook.

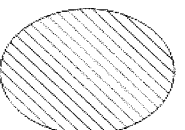

Well Done

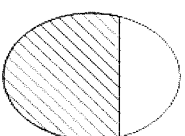

Medium/Well

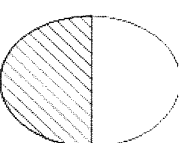

Medium

USING THE EGG PIERCER (LOCATED ON THE BASE OF THE MEASURING CUP)

1. In order to avoid cracking the eggs it is best to pierce a small hole in the larger end of the egg. Then place the smaller end of the egg onto the egg tray shelf, repeat for all the eggs you are cooking then place the egg tray shelf onto the heating plate. Replace the lid on top of the egg tray shelf. **DO NOT PLACE EGG TRAY SHELF OR POACHER TRAY DIRECTLY ONTO THE HEATING PLATE!**

COOKING EGGS

1. Plug the Egg Cooker into a power supply and switch on using the power button. The Egg Cooker will automatically switch off when all the water has evaporated and the power button light will go off. The eggs will now be cooked to your preference. Unplug the appliance from the power supply. Remove the stainless steel lid – be careful as lid will be very hot and steam may be released. Take out the egg tray shelf and cool the eggs ready for peeling.
2. Note: if using very large eggs you may only be able to cook 3-5 eggs at once.
3. Note: if you want to stop the cooking process at any point then switch off at the socket.

POACHING EGGS

1. To poach eggs fill the egg cooker with a full measuring cup of water and crack the egg(s) into the poacher tray. Place the egg tray shelf onto the heating plate and place the egg poacher tray on top of the egg tray shelf. Then place lid onto the Egg Cooker and press on switch. The Egg Cooker will now begin poaching your egg(s). Switch off the Egg Cooker and remove the poached eggs once they have been cooked to your liking.

CLEANING INSTRUCTIONS

1. Always unplug the appliance and allow it to cool before cleaning.
2. The egg tray and poacher tray can be washed in warm soapy water and dried. Wipe down the stainless steel cover and dry. The heating plate can only be cleaned with a damp cloth.
3. Do not immerse the appliance in water or any other liquid for any reason.
4. When there is excessive discoloration of the heating plate you can use household vinegar to clean. Dilute 1 part vinegar with 10 parts warm water and pour over the heating plate (taking care not to over flow or drip over the edges). Allow to soak for a while then pour away. Rinse carefully with plain warm water (again do not allow it to overflow) and dry with a towel.

PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

 This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

Imported by Benross®



MADE IN P.R.C

