

TERRAILLON – ON / OFF / TARE / UNIT – ELECTRONIC KITCHEN SCALE

READ BEFORE USE

- Do not place the scale in the microwave oven.
- Remove the battery when the scale is not in use for extended periods.
- When storing the scale, take care not to place any significant weight on it.
- Clean the scale with a sponge and soapy water, avoiding solvents and abrasive cleansers. Do not immerse it in water.

PRODUCT SPECIFICATION

Please note that the different symbols that appear on your scale:

⏻ or Ⓛ	ON / OFF
T	AUTOMATIC ADD 'N' WEIGH TARE FUNCTION
UNIT	WEIGHING UNIT CONVERSION (g / ml / lb.oz / fl.oz)

USING YOUR SCALE

Insert the battery(s) into the battery compartment ensuring the polarities are correct or remove the small plastic tab.

POWER ON / OFF AND WEIGHING:

- To activate the scale, press briefly the ⏻ or Ⓛ button. The screen will display (----), then 0g. For scales with touch sensitive buttons, a light gentle tap is sufficient.
- Place your ingredients or bowl on the platform of the scale. The weight will appear on-screen.
- The scale will turn off automatically after 1 to 2 minutes of no activity.

ADD 'N' WEIGH TARE FUNCTION:


The TARE function allows you to cancel out the weight of a bowl.

- Press the T button. The display will read 0g.
- You can now add your ingredients.
- Simply press the T button every time you wish to add a new ingredient and the scale will reset to zero.

WEIGHING UNIT CONVERSION:

- Weight may be displayed in: g / ml / lb.oz / fl.oz
- To change the unit of measurement, while the scale is on, press the UNIT button successively.

WARNING INDICATORS:

EEEE	OVERLOAD : REMOVE WEIGHT IMMEDIATELY
BATT / LO / 	BATTERY FAILURE : REPLACE IT

Terraillon.
LE BIEN-ÊTRE PRÉCISÉMENT