

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Do not leave the appliance unattended whilst connected to the mains power supply. Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any parts/accessories other than those supplied with this appliance.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.

Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.


Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.


Always unplug the appliance after use and allow to cool fully before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

 **Caution:** The appliance emits very hot steam; always exercise extreme caution during use.

 Hot surface - do not touch the hot section or heating components of the appliance.

 **Warning:** Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the garment steamer from the mains power supply and allow it to cool sufficiently.


Never immerse the garment steamer in water or any other liquid.

Descaling the Water Tank and Removing Limescale

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the garment steamer.

Limescale can develop over time and can affect the performance of the garment steamer. It is recommended to remove limescale at least once a month. Use a limescale removing solution that is suitable for use with a garment steamer. Always follow the manufacturer's instructions.

Description of Parts

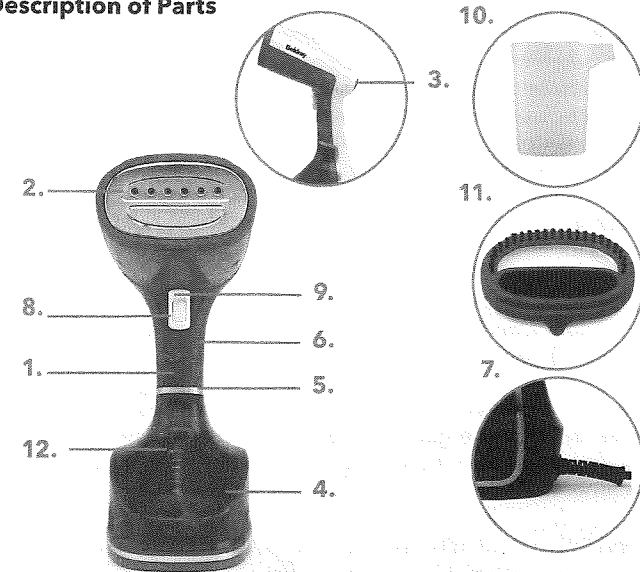

- | | |
|-----------------------------|---|
| 1. Handheld Garment Steamer | 7. Cord guard |
| 2. Steam head | 8. Steam trigger |
| 3. Power indicator light | 9. Steam trigger lock |
| 4. Water tank | 10. Measuring cup |
| 5. Water tank cap | 11. 2 in 1 fabric and lint brush attachment |
| 6. Handle | 12. Max. fill mark |

Before First Use

Clean the exterior surface of the garment steamer with a soft, damp cloth and dry thoroughly.

Allow the garment steamer to steam for approx. 3-4 minutes to remove any impurities that may have been left behind during production.

Note: When using the garment steamer for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the garment steamer when it is in use.

Using the Handheld Garment Steamer

STEP 1: Check that the garment steamer is switched off and unplugged from the mains power supply. If required, secure the 2 in 1 fabric and lint brush attachment by clicking it into place on the steam head; make sure that the 2 in 1 fabric and lint brush attachment is the right way up, and that the steam holes are not blocked.

STEP 2: To remove the water tank, pull it firmly away from the garment steamer main body.

STEP 3: Using the measuring cup, fill the water tank up to the max. fill mark. Once full, refit the water tank.

STEP 4: Place the garment steamer onto a flat, stable surface, and switch it on at the mains power supply.

The garment steamer will start to heat up once it is plugged in; the power indicator light will flash blue to signal that the garment steamer is preheating.

STEP 5: Whilst the garment steamer is preheating, hang the garment to be steamed.

STEP 6: After approx. 45 seconds of preheating, the power indicator light will become solid blue to signal that the garment steamer has reached the required temperature.

STEP 7: To begin steaming, press the steam head (with the 2 in 1 fabric and lint brush attachment securely in place if required) gently against the fabric and hold down the steam trigger. Carefully steam the garment using long, straight, downwards movements to remove any wrinkles or creases.

STEP 8: Once the garment has been steamed, release the steam trigger and then switch off and unplug the garment steamer from the mains power supply.

Note: Refill the water tank as and when required; one max. fill offers approx. 12-15 minutes of continuous use.

When removing the water tank, take care not to touch the steam head.

The steam trigger can be locked into position for continuous steam by sliding the middle section of the button downwards when it is pressed.

Caution: Always allow the garment steamer to cool fully before adding or removing the attachment from the steam head. Make sure that the attachment is the right way up.

During operation, the garment steamer will get very hot. Exercise extreme caution.

Do not hold the garment steamer by any other part of the unit except the handle.

Do not fill the water tank past the max. fill mark.

Do not use anything other than water to fill the water tank.

Storage

Before storing in a cool, dry place, check that the garment steamer and any accessories are cool, clean and dry.

The water tank should be empty before storage.

Never wrap the cord tightly around the garment steamer; wrap it loosely to avoid causing damage.

Specifications

Product code: BEL0815

Input: 220-240 V ~ 50/60 Hz

Output: 1200 W

Water tank capacity: 260 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to www.beldray.com/manuals.html and search **BEL0815** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to www.beldray.com/guarantee-registration.html and register your product within 30 days of purchase.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



FULL INSTRUCTION MANUAL AT
www.beldray.com/manuals.html
PRODUCT CODE: **BEL0815**

Beldray^{est 1872}[®]

MULTISTEAM

PRO

QUICK START GUIDE

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA.
www.beldray.com

CD190320/MD000000/V1