


NESPRESSO

YOUR SAFETY FIRST!

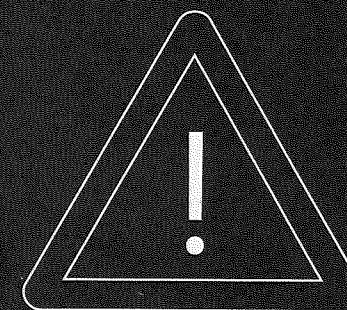

FR VOTRE SÉCURITÉ D'ABORD! DE SICHERHEITSHINWEISE IT LA TUA SICUREZZA
 PRIMA DI TUTTO ES TU SEGURIDAD ES LO PRIMERO PT A SUA SEGURANÇA PRIMEIRO!
 CS BEZPEČNOST NA PRVNÍM MÍSTĚ SK BEZPEČNOST NA PRVOM MIESTE HU AZ ŐN
 BIZTONSÁGA A LEGFONTOSABB! PL TWOJE BEZPIECZENSTWO PRZED W SZYTKIM
 RU БАША БЕЗОПАСНОСТЬ ПРЕЖДЕ ВСЕГО! EL ΠΡΟΤΕΡΑΙΟΤΗΤΑ ΕΧΕΙ Η ΑΣΦΑΛΕΙΑ
 ΣΑΣ! NL JOUW VEILIGHEID STAAT VOOROP! DA SIKKERHEDSINSTRUKTIONER
 NO SIKKERHET FØRST SV FÖR DIN SÄKERHET! FI TURVALLISUUS ENSIN!
 RO SIGURANȚA DUMNEAVOASTRĂ ÎN PRIM PLAN



| | | |
|----|---------------------------|----|
| EN | SAFETY PRECAUTIONS | 3 |
| FR | CONSIGNES DE SÉCURITÉ | 5 |
| DE | SICHERHEITSHINWEISE | 9 |
| IT | PRECAUZIONI DI SICUREZZA | 12 |
| ES | PRECAUCIONES DE SEGURIDAD | 15 |
| PT | PRECAUÇÕES DE SEGURANÇA | 19 |
| CS | BEZPEČNOSTNÍ POKYNY | 22 |
| SK | BEZPEČNOSTNÉ POKYNY | 25 |
| PL | ZASADY BEZPIECZEŃSTWA | 28 |
| HU | BIZTONSÁGI ELŐÍRÁSOK | 32 |
| RU | МЕРЫ ПРЕДОСТОРОЖНОСТИ | 35 |
| EL | ΜΕΤΡΑ ΑΣΦΑΛΕΙΑΣ | 38 |
| NL | VEILIGHEIDSMAAATREGELEN | 42 |
| DA | SIKKERHEDSANVISNINGER | 45 |
| NO | SIKKERHETSINSTRUKSER | 48 |
| SV | SÄKERHETSINSTRUKTIONER | 51 |
| FI | TURVAOHJEET | 54 |
| RO | INSTRUCȚIUNI DE SIGURANȚĂ | 56 |

EN SAFETY PRECAUTIONS

⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

i INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

⚠ WARNING: risks of injuries if you don't use this appliance correctly.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children

of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.

- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not use the device as a toy.
- Children should be supervised to ensure that they do not play with the appliance.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

The appliance must only be connected after installation.

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord or plug are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the supply cord or the plug are damaged, do not operate the appliance. Only return the appliance to the **Nespresso Club** or to a **Nespresso** authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- The appliance shall not be placed in a cabinet when in use.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Do not use any strong cleaning agent or

- solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- Always follow the cleaning instruction to clean your appliance.
- To disconnect the appliance, stop any preparation, then remove the plug from the power socket.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!
- The use of accessory attachments not recommended by the manufacturer may result in an unsafe machine condition.

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the **Nespresso Club** or **Nespresso** authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.

- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use an already used, damaged or deformed capsule.
- If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the **Nespresso Club** or **Nespresso** authorized representative.
- Fill the water tank only with fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces or connector.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for original **Nespresso** coffee capsules available exclusively through the **Nespresso Club** or your **Nespresso** authorized representative.
- All **Nespresso** appliances pass stringent

- controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- **Nespresso** reserves the right to change instructions without prior notice.

Descaling

- **The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces.**
- **Nespresso** descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day.
- For coffee and coffee&milk machines, descale according to Quick Start Guide recommendations or specific alerts.

SAVE THESE INSTRUCTIONS Pass them on to any subsequent user. This instruction manual is also available as a PDF at nespresso.com

FR CONSIGNES DE SÉCURITÉ

⚠ ATTENTION: les consignes de sécurité font partie de l'appareil. Veuillez les lire attentivement avant d'utiliser votre nouvel appareil. Gardez-les dans un endroit où vous pourrez les retrouver et vous y référer ultérieurement.

EN WARRANTY

De'Longhi warrants this product against defects in materials and workmanship for a period of two years from the date of purchase. During this period, De'Longhi will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from accident, misuse, improper maintenance, or normal wear and tear. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify, and are in addition to, the mandatory statutory rights applicable to the sale of the product to you. If you believe your product is defective, contact Nespresso for instructions on where to send or bring it for repair. Visit the website www.nespresso.com for more information about Nespresso.

AUSTRALIA AND NEW ZEALAND: How to Claim Under the De'Longhi Warranty

If you believe your product is defective, call 1800 623 033 (AU) or 0800 234 579 (NZ). Addresses: Nespresso Australia, Level 4, 201 Miller St., North Sydney, NSW 2060. Nespresso New Zealand, Level 3, 12-16 Nicholls Lane, Parnell, Auckland, 1010. Nespresso will bear the costs of any product sent back to them.

AUSTRALIA ONLY: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

US/CA WARRANTY

De'Longhi warrants this product against defects in materials and workmanship for a period of one year from the date of purchase. During this period, De'Longhi will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from accident, misuse, improper maintenance, or normal wear and tear. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify, and are in addition to, the mandatory statutory rights applicable to the sale of the product to you. If you believe your product is defective, contact Nespresso for instructions on where to send or bring it for repair. Please visit our website at nespresso.com to discover more about Nespresso.

De'Longhi Canada Inc. - 3275 Argentia Road, Unit 101 - Mississauga, Ontario L5N 0G1

CA GARANTIE

De'Longhi garantit ce produit contre tous les défauts matériels et de fabrication pour une période de un an à compter de la date d'achat. Pendant cette période, De'Longhi réparera ou remplacera, à sa discrétion, tout produit défectueux sans frais supplémentaires pour son propriétaire. Les produits de remplacement ou les pièces réparées seront exclusivement garantis pour la part non expirée de la garantie initiale ou pendant six mois, la durée retenue étant la plus longue. Cette garantie limitée ne s'applique pas à un quelconque défaut résultant d'un accident, d'un usage inapproprié de la machine, d'un mauvais entretien ou d'une usure normale. Sauf si cela est prévu par la législation en vigueur, les conditions de cette garantie limitée n'excluent, ni ne restreignent, ni ne modifient les droits légaux obligatoires relatifs à votre achat, voire y sont complémentaires. Si vous estimez que votre produit est défectueux, contactez Nespresso pour obtenir des précisions sur l'adresse à laquelle il convient de l'envoyer ou de l'apporter pour réparation. Veuillez consulter notre site web www.nespresso.com pour en savoir plus sur Nespresso.

De'Longhi Canada Inc. - 3275 Argentia Road, Unit 101 - Mississauga, Ontario L5N 0G1