

MateStar®

Four Slice Electronic Toaster



Model No.: MAT-4002A

220-240V 50Hz 1300W



Made in PRC

IMPORTED BY:

ROMICO J.T.TRADERS LTD

11 DIOS STR.1056 NICOSIA-CYPRUS

Tel:35722 430310

WWW.MATESTAR.EU

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following.

1. Do not touch hot surfaces. Use Handles or knobs.
2. To protect against electrical shock. Do not immerse cord plug or appliance in water or other liquid. Do not put hand in side of product when working.
3. Close supervision is necessary when appliance is used near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off accessories.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliances to factory for examination repair or adjustment.
6. Do not use outdoors. This appliance is for household use only.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not place on or near gas or electric burner, or in a heated oven.
9. Toasting Lever must be in the "Up" position before attaching or disconnecting the plug from wall outlet.
10. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
11. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies when in operation.
12. Do not attempt to dislodge food when toaster is plugged in.
13. The bread may burn therefore do not use the toaster near or below combustible material, such as curtains.
14. The temperature of accessible surfaces may be high when the appliance is operating.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
16. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities

prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.


SAVE THESE INSTRUCTIONS

INSTRUCTIONS

BEFORE USE

Check that the voltage of the appliance corresponds to the mains voltage and plug in. This appliance is fitted with an earth wire for extra safety.

1. Start Control
2. Stop and automatically eject button
3. Toasting setting knob
4. Bread insert slot
5. Crumb tray

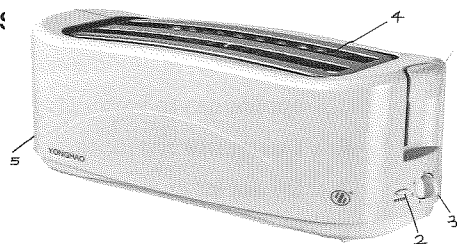

SELECTING THE BROWNING LEVEL

Select the setting of your choice from the possible browning levels. The degree of browning increases in relation to the numbers on the selection dial.

HOW TO USE YOUR TOASTER

Place the bread in the toaster and push the lever down until it automatically locks into place.

TO STOP THE TOASTER

The toaster is automatically released when the previously selected browning levels. If you want to interrupt the toasting process at any time, just push the "STOP" button and the lever button will return to its original position.

CLEANING YOUR TOASTER

To clean your toaster, first remove the plug from the mains outlet, then open crumb tray at bottom of toaster. Clean the toaster with a soft, dry

cloth and wipe dry afterwards, never use water.

NOTICE

The appliances are not intended to be operated by means of an external timer or separate remote-control system.