

Filling the Water Tank

Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is positioned upright.

Do not fill the water tank when the iron is switched on.

WARNING: Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

Using the 2600 W Ultra Sleek

STEP 1: Plug in and switch on the iron at the mains power supply.

STEP 2: Fill the water tank.

STEP 3: Rotate the temperature control dial to the desired temperature (1-dot position minimum).

STEP 4: To increase the temperature of the iron, rotate the control dial in a clockwise direction until the desired heat setting is reached. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the control dial is set to the 2-dot heat setting or higher.

Ironing with Steam

The steam settings are ideal for removing creases from fabrics such as cotton and linen with ease.

STEP 1: Fill the water tank.

STEP 2: Plug in and switch on the iron.

STEP 3: Rotate the temperature control dial until the desired heat setting is reached. The iron will only produce steam when the temperature control dial is set to the 3-dot heat setting.

STEP 4: Select the desired steam setting by sliding the steam control switch to the right. The first click is the lowest steam setting whilst the last click delivers the highest steam setting. The steam setting can be switched off at any time by sliding the steam control switch to the off position.

STEP 5: After use, rotate the temperature control dial to the 'Off' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

NOTE: Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate.

The temperature indicator light will cycle on and off during use to regulate the temperature.

WARNING: Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

Ironing without Steam

For removing creases from more sensitive fabrics, try ironing without steam.

STEP 1: Move the steam control switch to the off position.

STEP 2: Plug in and switch on the iron.

STEP 3: Rotate the temperature control dial until the desired heat setting is selected. Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

Steam Burst Function

For creases that are stubborn and difficult to remove, use the steam control trigger to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.

Water Spray Function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry ironing delicate fabrics that cannot be steam ironed. To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.

NOTE: When using the water spray function for the first time, it may be necessary to press the water spray button several times.

Self-clean Function

The self-clean function removes limescale and impurities from within the ceramic soleplate. It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

Specifications

Product code: BEL01526-150

Input: 220-240 V ~ 50-60 Hz

Output: 2600 W

Water tank capacity: 300 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to www.beldray.com/manuals.html and search **BEL01526-150** to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to guarantee.upgs.com/beldray and register your product within 30 days of purchase.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

FULL INSTRUCTION MANUAL AT
www.beldray.com/manuals.html
PRODUCT CODE: **BEL01526-150**

est 1872
Beldray[®]
FOR 150 YEARS

2600 WATT
ULTRA SLEEK
QUICK START GUIDE

Find us on 

www.facebook.com/Beldray

UK
CA
CE



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.

Germany. 51149 Köln.

MADE IN CHINA.

www.beldray.com

©Beldray trademark. All rights reserved

CD230622/MD000000/V1

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, if there is any leakage or if it has been dropped or damaged, do not use. Only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not leave the appliance unattended whilst connected to the mains power supply. Do not use the appliance for anything other than its intended use.

Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens. Do not pull or carry the appliance by its power supply cord.

Switch off the appliance and disconnect it from the mains power supply before changing or fitting any accessories.

 
Always unplug the appliance after use and


allow to cool fully before any cleaning or user maintenance.

This appliance must only be used and rested on a stable surface.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

 **CAUTION:** The appliance emits very hot steam; always exercise extreme caution during use.

 Hot surface - do not touch the hot section or heating components of the appliance.

 **WARNING:** Danger of scalding. Keep the appliance away from flammable materials.

Care and Maintenance


STEP 1: Drain the remaining water from the water tank to prevent it from leaking during cleaning.

STEP 2: Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

STEP 3: If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

STEP 4: To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

Description of Parts

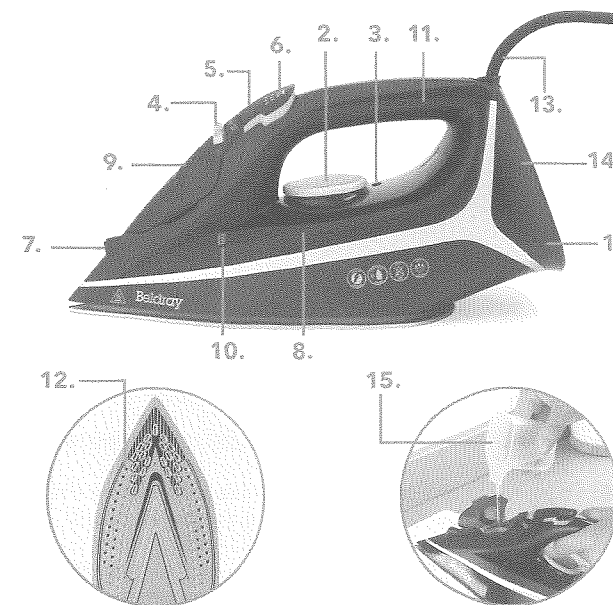

- | | |
|------------------------------------|-----------------------|
| 1. 2600 W Ultra Sleek main unit | 8. Water tank |
| 2. Temperature control dial | 9. Water tank cap |
| 3. Temperature indicator light | 10. Max. fill mark |
| 4. Steam control/self-clean switch | 11. Easy-grip handle |
| 5. Steam burst button | 12. Ceramic soleplate |
| 6. Water spray button | 13. Cord guard |
| 7. Spray nozzle | 14. Heel rest |
| | 15. Measuring jug |

Instructions for Use

Before First Use

STEP 1: Switch off and unplug the iron from the mains power supply.

STEP 2: Wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

STEP 3: To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material. Do not immerse the iron in water or any other liquid.

NOTE: When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.