

**MateStar**<sup>®</sup> **PLATINUM**  
Quality & Style

**MILK FROTHER**  
**ITEM NO.:PLM-0805-5EW**



220-240V~, 50Hz  
450-550W

**PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR  
FUTURE REFERENCE**

**Made in PRC**  
**IMPORTED BY:**  
**ROMICO J.T.TRADERS LTD**  
**11 DIOS STR, 1056 NICOSIA CYPRUS NCOSIA CYPRUS**


# MILK FROTHER INSTRUCTION MANUAL

## Product Overview

Congratulations on the purchase of this high quality product. This useful Milk Frother helps you make a huge variety of delicious hot and cold drinks. Put a bit of froth back in your life! Let your imagination run wild! Quick and easy to use you will soon be enjoying all kinds of fabulous drinks. Don't be afraid to experiment!

Used and cared for in line with the guidance provided within this Instruction Manual it should provide you with many years of trouble free service.

## General description

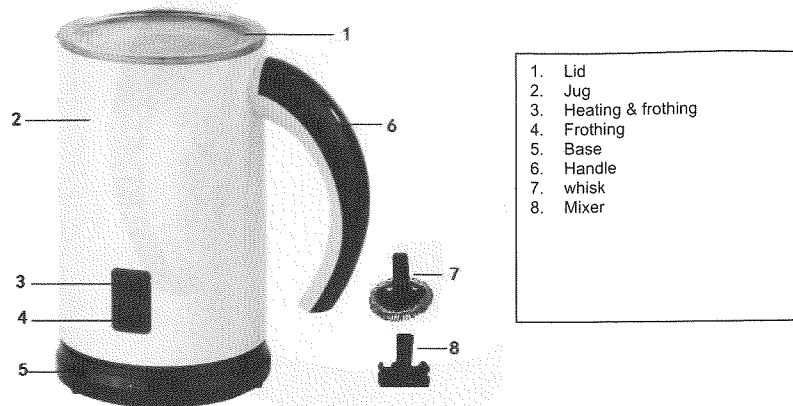

## Health and Safety

The use of any electrical appliance requires the application of the following common sense safety rules.

Failure to observe these safety rules exposes the user to the risk of personal injury or the product itself to the risk of damage. These two categories are denoted by the following conventions:

**WARNING:** Danger to the person!

**IMPORTANT:** Damage to the appliance!  
Please therefore note the following safety advice.

## Location

- This appliance is intended for domestic use only. It should NOT be used for commercial purposes. Such use may damage the product and will invalidate your warranty.
- Always locate your appliance away from the edge of a worktop.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Do not use the appliance outdoors, or near water.

## Mains Cable

- The mains cable should reach from the socket to the base unit without straining the connections.
- Do not let the mains cable hang over the edge of a worktop where a child could reach it.
- Do not let the cable run across an open space e.g. between a low socket and table.
- Do not let the cable run across a cooker or toaster or other hot area which may damage the cable.
- If the supply cable is damaged, **DO NOT USE THE APPLIANCE**. The cable must be replaced by a suitably qualified person with a special cable assembly available from the manufacturer or its service agent.

## Personal Safety

- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse the cord, plug and / or appliance in water or any other liquid.
- The use of accessory attachments not recommended by the manufacturer may cause damage to the unit and a risk of personal injury. It will also invalidate your warranty.
- **WARNING.** This appliance contains no user-serviceable parts. All repairs must only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
- **WARNING.** Do not use the appliance after a malfunction or if it has been dropped or damaged in any way.
- **WARNING.** Do not use the appliance for any purpose other than its intended use.
- **WARNING.** Extreme caution must be observed when moving an appliance with hot contents.
- **WARNING.** Do not use the product with wet or moist hands.
- Only clean your Product after it has been disconnected from the Mains Supply and allowed to fully cool down.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

## Children

- Never allow a child to operate this appliance.

- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where the child cannot see properly or should not be reaching.

### Safety Considerations Specifically for this Product

- **IMPORTANT.** Do not operate this appliance when it is empty.
- **IMPORTANT.** When operating this **Milk Frother**, keep at least four inches (ten centimetres) of free space on all sides to allow for adequate air circulation.
- **WARNING.** The external surfaces of this appliance become hot in use. Use only the knob and handle provided when removing the lid or lifting the Jug.
- To disconnect, turn off at the wall socket before removing the plug from the mains outlet.
- **IMPORTANT.** This appliance is fitted with BOIL DRY protection. If you accidentally switch it on when it is empty it will switch off automatically to prevent damage. Leave the unit to cool for around 30 minutes. It will then reset and can be used again.
- Unplug from the outlet when not in use and before cleaning. Always hold and pull the plug, never pull the cord.
- Allow the appliance to cool fully before cleaning or storage.
- **WARNING.** Do not cover any part of the **Milk Frother** with a cloth or similar, it will cause overheating. Risk of fire.
- Never leave the appliance unattended when operating.
- **WARNING.** Do not use abrasive cleaning materials or chemicals. These may damage the cosmetic surfaces of your product.
- Do not use any accessories other than manufacturer recommended accessories with this product.
- **WARNING.** Do not use this appliance in conjunction with an external timer or remote control.
- The first time you use your **Milk Frother** there may be a slight odour given off. This is normal and is just the manufacturing residues burning off.
- **WARNING.** Do not overfill your **Milk Frother** as this may cause liquids to spill out on to your work surface or enter the **Base** unit.
- The Milk Frother has markings on the inside of the Jug clearly showing the acceptable maximum levels of liquids. See below:



MAXIMUM Level for Frothing hot or cold milk (130ml)



MAXIMUM Level for Stirring hot or cold milk only (240ml)

- **WARNING.** Do not move the appliance when operating. Risk of scalding.

- **WARNING.** If you accidentally spill fluids onto the Base. Turn it upside down and leave to dry for several hours. Do not use until all traces of the liquid have disappeared. Danger of electric shock or fire.

### Electrical Requirements

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the product rating plate corresponds with that of your local network before connecting the appliance to the mains power supply

### How to use your Milk Frother

To begin using your Milk Frother, first, carefully unpack it and check that it has not sustained any damage during transportation. Also check that all the items shown in the **PRODUCT OVERVIEW** are present. We recommend that you retain your packaging so that, in the unlikely event of a fault developing, you are able to return the product in the correct packaging for best protection.

#### Before first use

1. Remove all packaging material.
2. Remove any stickers or labels from the appliance (other than the Product Rating Plate).
3. Your **Milk Frother** has a **Non-stick Coating** inside the **Jug**. To provide years of reliable service these need to be treated with care. The use of metal or sharp edged tools will cause permanent damage and allow liquids such as milk to stick to the surface.
4. Wipe the inside of the **Jug** with a damp cloth moistened with warm water and washing up liquid. Rinse out thoroughly with hot water. Dry with kitchen towel.  
**WARNING.** Take care not to get water on the electrical connections on the underside of the **Jug**.
5. Wash the **Stirring** and **Frothing Attachments** in hot soapy water, rinse and dry thoroughly.
3. Wipe the outside of the appliance with a moist cloth.
4. Dry thoroughly with a soft cloth.
5. Your **Milk Frother** is ready for use!

#### Preparing for use


1. Place the appliance on a stable, level and heat resistant surface.
2. Having followed steps 1-4 in the "Before First Use" section, plug the appliance into a suitable wall socket and switch on the socket.

**IMPORTANT.** Do not place the appliance on non-heat-resistant surfaces.

#### Using your Milk Frother

- Place the appliance on a stable, level and heat resistant surface.
- Stand the **Jug** on the **Base**. Make sure it is correctly located.

### 3. Hot Drink Mode

- To make a FROTHED HOT DRINK follow the instructions using the **mixer and** then press the button  on the **Mode selector Switch**.
- The **Mode** button will illuminate **RED** and the **Milk Frother** will start to operate and froth your drink.
- After 1.5 to 2.0 minutes the Milk Frother will switch off and your drink will be ready.

NOTE: When the **Milk Frother** switches off in the "HEAT MODE" it will not immediately switch back on as the temperature will be too high. However, if you are making a second hot drink then filling the appliance with cold liquid will reset it.

### 4. Cold Drink Mode

- To make a FROTHED COLD DRINK follow the instructions using the and then press the button  on the **Mode Selector Switch**.
- The **Mode** button will illuminate **BLUE** and the **Milk Frother** will start to operate and froth your drink.
- After 1.5 to 2.0 minutes the **Milk Frother** will switch off and your drink will be ready.

- When you have finished using your **Milk Frother**, switch off at the wall socket and unplug. Leave to cool completely before cleaning. We recommend you clean the appliance as soon as it has cooled to avoid any residues drying and becoming harder to remove.

## Cleaning and Storage

### Cleaning

We recommend that the **Milk Frother** is cleaned as soon as it has cooled to prevent the build up of any residues. Proceed as follows:

- Disconnect the appliance from the Mains Supply and allow to cool down completely.
  - Wipe the inside of the **Jug** with a damp cloth moistened with warm water and washing up liquid. Rinse out thoroughly with hot water. Dry with kitchen towel.
- WARNING.** Take care not to get water on the electrical connections on

the underside of the **Jug**.

- Wash the **Stirring** and **Frothing Attachments** in hot soapy water, rinse and dry thoroughly.
- Wipe the outside of the appliance and the base with a moist cloth.
- Dry thoroughly with a soft cloth.

**IMPORTANT. DO NOT** use any abrasive or caustic cleaning agents or scouring pads as these may damage the surface of your appliance.

### Storage

Once the appliance has been thoroughly cleaned and dried it can be stored in a dry location out of the reach of children.

To ensure it is dust free and ready for use the next time you need it we recommend you keep it in its original packaging.

## Specification

|                   |                |
|-------------------|----------------|
| Model             | MILK FROTHER   |
| Operating Voltage | 220-240V~ 50Hz |
| Power Consumption | 450-550W       |

## Recycling

At the end of its useful life or at any time in the future you need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice

## Approval

This product complies with the European Low Voltage, Electromagnetic Compatibility and RoHS (Restriction of Harmful Substances Directives when installed and used in accordance with this instruction manual.



**PLEASE FILL YOUR DETAILS FOR FUTURE USE**

| <b>GUARANTEE CARD</b>     |  |
|---------------------------|--|
| <b>CUSTOMER'S DETAILS</b> |  |
| NAME OF BUYER             |  |
| ADDRESS                   |  |
| TELEPHONE                 |  |
| <b>DETAILS OF SHOP</b>    |  |
| NAME OF SHOP              |  |
| RECEIPT VOUCHER NO.       |  |
| DATE OF PURCHASE          |  |
| <b>APPLIANCE DETAILS</b>  |  |
| TYPE OF APPLIANCE         |  |
| MODEL NO.                 |  |
| SERIAL NO.                |  |