 


INSTRUCTION MANUAL

GREEK COFFEE MAKER

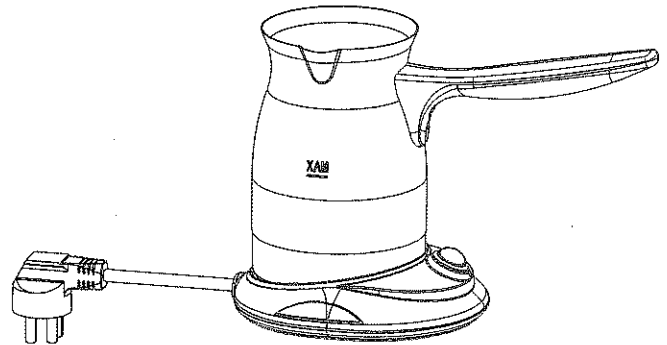

Please read the instructions and safety notice carefully before using your coffee maker and keep it in a safe place for future use.

 
Safety Notice

1. Please read the Manual and safety notes before operation and keep it well;
2. The coffee maker should be placed out of the children's reach;
3. Please make sure the voltage indicated on the rating plate agrees with that of the electrical installation.;
4. Damaged power cord cannot be used; the appliance shall stay away from heat sources and flammable materials.
5. Please do not use the appliance the open air, immerse it into liquid and get close to heat source;
6. If the power supply cord is damaged, it must be replaced by the manufacturer or its services agent or a similarly qualified person in order to avoid a hazard. Please keep the circuit dry and the use original accessories;
7. Turn off the power and unplug the power before moving the appliance;
8. The original packaging can well protect the coffee maker during the transportation, please retain the packing box;
9. The proper use and maintenance can extend the service life of the coffee maker;
10. Please do not open any component of the coffee maker during the operation, and do not cut off the power supply as to avoid the deadlock of brewer or process chaos;
11. For machine failure, please consult the distributor duty, not dismantle the machine on your own; please bring the machine to authorized service

center for repair if necessary. The manufacturer shall assume no liability for any accident incurred due to unauthorized disassembly;

12. The machine shall not be operated by the following people (including children): people suffer a mental, sensory or physical defect, or are lack of experience and knowledge. Unless the said people have been supervised or guided by qualified personnel, who shall take full responsibility for the safety during the operation. Please do not let the children play with the appliance.
13. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;-by clients in hotels, motels, and other residential type environments;
 - Bed and breakfast type environments

Overview

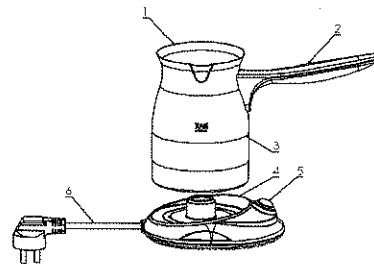

1. Coffee Spout
2. Handle
3. Brewing pot
4. Base
5. On/Off Switch
6. Power cord

USING OF ELECTRIC COFFEE MAKER:

Making Turkish Coffee:

1. Max.3 cup of coffee can be made at each time...
2. For 1 Cup of coffee=2 tea spoon or 1sweet spoon coffee is put into the brewing pot.
3. For 1 Cup of coffee ,put 1 or more tea spoon sugar into the brewing pot.
4. Pour water into the brewing cup according to how many cup or cups of coffee you want to make
5. Replace the brewing pot on the base...
6. Turn on the on/off switch.
7. Mix the coffee and sugar in the brewing pot for a short time
8. When the coffee boils, turn off the on/off switch. Wait for 15 or 20 seconds to make kaimaki(foam) top on the coffee .Then pour the coffee into the cups.

Preparing Hot Water

When you need hot water to make herbal teas and instant coffee or for any other reason.

-Pour the water how much you need into the brewing pot .But do not exceed the MAX level. If you exceed MAX level, boiled water can overflow and give some damage to you.

-Turn on the on/off switch.

-When the water boils, turn off the on/off switch.

CLEANING BREWING POT

Inside Cleaning: Unplug the coffee maker from the power supply. You can use detergent to clean up the coffee maker if it is too dirty. Otherwise boiled water can clean it.

TECHNICAL SPECS

Power Input	220~240V /50Hz
Power consumption	850W
Heating Power	850W
Protection against overheating	Bi-metal saver and thermal fuse
Water capacity	260ml(maximum)
Boiling time	5min.(maximum)
Dimensions	Diameter 106 mm, height135 mm

POWER CONNECTION DRAWING

W A R N I N G

- 1) DO NOT DIP your coffee maker into the water That cause electricity shock hazard and break down your coffee maker
- 2) Even if there is bi-metal saver to protect against over heating.
- 3) DO NOT TURN ON your coffee maker while there is no water in it.
DO NOT WASH YOUR coffee maker IN THE DISHWASHER
Do not boil the milk in the brewing pot. If you boil the milk in the brewing pot, it sticks on heating element and makes a black layer that can only be cleaned by steel wool.
So we do not recommend to be put milk into the brewing pot.

If the power cord damaged, it must be replaced by the manufacturer, a repair shop or a suitably qualified person, in order to avoid hazards.

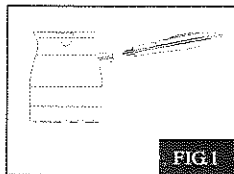
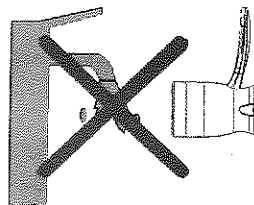 
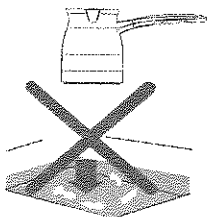 


FIG.1

Please assemble the handle before using the coffee maker

 

FIG.2

Put the coffee powder inside

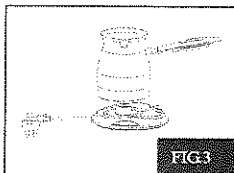 


FIG.3

Fill the pot with fresh water

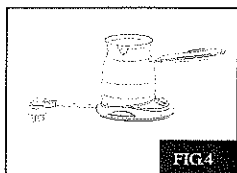 


FIG.4

Put the pot on the base, turn on the On/Off switch

PLEASE FILL YOUR DETAILS FOR FUTURE USE

GUARANTEE CARD

CUSTOMER'S DETAILS

NAME OF BUYER
ADDRESS
TELEPHONE

DETAILS OF SHOP

NAME OF SHOP
RECEIPT VOUCHER NO.
DATE OF PURCHASE

APPLIANCE DETAILS

TYPE OF APPLIANCE
MODEL NO.
SERIAL NO.
