


Berlinger Haus[®]
PROFESSIONAL PRECISION



MINI CHOPPER

INSTRUCTION MANUAL

HU - MINI APRÍTÓGÉP
CZ - MINI MIXÉR
RO - MINI TOCĂTOR
NL - MINI NAKMOLEN
RU - МИНИ-ИЗМЕЛЬЧИТЕЛЬ
PL - MAŁY ROZDRABNIACZ
GR - ΜΙΝΙ ΚΟΦΤΗΣ
FR - MINI CHOPPER



DEUTSCHE
QUALITÄTS
KONTROLLE
I.F.G.B. STANDARD

Berlinger Haus
Handwritten signature

INSTRUCTION MANUAL

MINI CHOPPER

For your safety before using and maintaining the appliance read this instruction manual carefully and keep it for future reference.


MODEL: BH-9162A, BH-9379, BH-9380

CAPACITY: 600ml

Product spec: 220-240V ,50-60Hz, 300W

DESCRIPTION

1. Switch
2. The unit (main body)
3. Lid
4. Top chopper blade
5. Lower chopper blade
6. Bowl
7. Non-slip mat
8. Plug and power cord

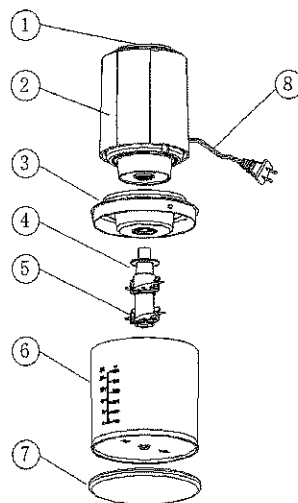

The picture is for reference only.

IMPORTANT SAFEGUARDS

Do not operate for more than 30 seconds at a time. Stop the appliance and let the appliance to cool down for 3 minutes.

- Check that the voltage of the appliance corresponds to the voltage marked on your mains supply.
- Always unplug the appliance after use and before cleaning.
- Before removing the lid, please wait until the blade has completely stopped.
- Handle the chopping blades carefully! It is extremely sharp! Always hold it by the plastic part.
- After much use, the blade will become blunt and should be changed.
- To protect against the risk of electric shock DO NOT IMMERSE the appliance, the cord or the plug in water or any other liquid, and do not operate the appliance with wet hands.
- Never try to dismantle the appliance yourself.
- If the supply cord or the plug is damaged, do not use the appliance.
- Any other servicing should be performed by an authorized service representative.
- Please make sure the appliance cools down more than 3 minutes between two operations. It has to stop after 20 minutes with that the main engine can cool down.
- This appliance is intended for Household use only. Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.
- This appliance shall not be used by children. Always keep the appliance and its cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This product is not able to chop hard things, such as: Meat with bones, soya bean, pepper, coffee bean, ice cubes and freezing food.
- The glass bowl is not able to heat by microwave oven, and do not wash with warm water more than 50 degrees.
- Do not start-up if there is nothing in the chopper. Avoid the blades rub with the glass bowl.
- Do not blend any liquid.
- Do not use the appliance outdoors.

USAGE OF THE APPLIANCE

- Put the top chopper blade to the lower chopper blade and into the axis of bowl.
- Place the ingredients/food to be chopped in the bowl.
- Place the lid onto the bowl
- Place the unit (main body) on the lid and keep the blade axis into the unit axis.
- Plug the appliance in appropriate outlet.
- Press the switch and keep it pressed in, the unit will start to operate.
- After the food is in the chopper, but the blades can not speed up in a few second, please take out the power cord, take out part of food, and then continue.
- Release press on the switch knob and please wait for the blade to stop.
- Remove the unit (main body) and the lid
- Remove the blade carefully.
- To extend the lifespan of the appliance please refer to below chopping guide.

Food	Max. Quantity	Maximum Time
Beef (cut into 20mmx20mmx20mm)	280g	30 secs
Garlic (quarter)	280g	20 secs
Lean meat (cut into 20mmx20mmx20mm)	280g	30 secs
Carrot (cut into 20mmx20mmx20mm)	280g	30 secs
Little pepper	200g	25 secs
Fried peanuts	250g	30 secs
Leafy greens (cut into length with 40mm)	500mL	30 secs

CLEANING

- Always unplug the appliance.
- The unit (main body) must only be wiped with a damp cloth. Never place it in a dishwasher. Never immerse the unit in water or place it under running water.
- The bowl, the blade, the lid can be washed under running water.

STORAGE

- After clean, please wipe dry or dry by airing. Re-assemble the product and store up.
- Please place this product in the dry and ventilate environment.



CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.