

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.



WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
- **Always check the mains voltage corresponds to the voltage on the rating plate.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Check that the mains voltage corresponds with the rating of the appliance before operating.
- Do not touch hot surfaces-Use the handles.
- To protect against electric shock, do not immerse cords, plugs appliances in water or any other liquid.
- Do not leave any appliance unattended while it is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities,

or lack of experience and knowledge ,unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety, children be supervised to ensure that they do not play with the appliances.

- Unplug from outlet when not in use or before cleaning, allow to cool before putting on or taking off any parts and before cleaning appliance.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner .If the supply cord or appliance is damaged ,it must be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors or for commercial purposes.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- To disconnect remove the plug from the MAINS outlet. Do not pull plug out by the cord.
- Do not use this product for anything other than its intended use. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not use in the immediate vicinity of a swimming pool, bath tub or shower.
- This appliance is for household use only
- No liability can be accepted for any damage caused. by non-compliance with these instructions or any other improper use or mishandling.
- Unplug the appliance when finished using.

BEFORE FIRST USE

Remove all packaging materials.


Clean the baking plates with a damp cloth or sponge.

Slightly grease the baking plates with a little cooking oil.

Take care to prevent water from running into the appliance

PARTS IDENTIFICATION

Before using your Omelet Maker for the first time, you should become familiar with all of the parts. Read all Instructions and Safeguards carefully.

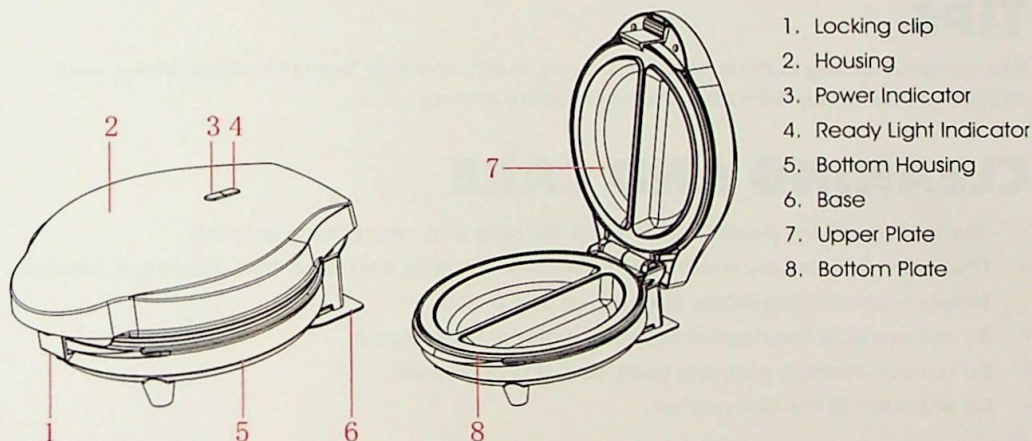

USING YOUR OMELETTE MAKER


Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of cooking oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your Omelette Maker is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

- Place the Omelette Maker on a flat stable surface and insert the plug into the power outlet, you will notice that the Power indicator will go on, indicating that the Omelette Maker has begun preheating.
- Allow your Omelet Maker to pre-heat until the ready indicator goes off. This indicates that the cooking plates have reached the correct temperature for cooking. (Note: the Omelette Maker is thermostatically controlled so will constantly go on and off during cooking to keep an even temperature).



- Open the Omelette Maker by pressing on the lid and locking mechanism - please note the Omelette Maker will be hot during and after use!
- For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the omelettes after cooking.
- Divide egg mixture into each side (taking care not to overfill as the omelette may expand during cooking.
- Gently close the lid, ensuring the latch locks in place. Do not slam the lid down as it may cause the mixture to run off the cooking plates.
- Allow to cook for approximately 3- 5 minutes or until golden.
- To remove omelettes, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of the cooking plates.

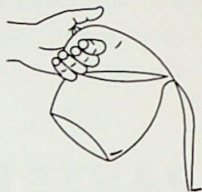

TIPS

You can preheat veg such as peppers, onions, mushrooms etc in the Omelette Maker until cooked to your liking then pour the egg mixture on top.

CLEANING AND CARE

- Always turn off the power and remove the plug after and before cleaning.
- The cooking plates are coated with non-stick material, therefore little cleaning is required. Simply wipe cooking plates over with a damp cloth.
- Do not immerse the Omelet Maker in water or other liquid.
- Do not use abrasive scouring pads, powders or cleaners.
- Do not place in the dishwasher.

STORAGE

- Always unplug the Omelet Maker before storage.
- Always make sure the Omelet Maker is cool and dry before storing.
- To minimize storage space in your kitchen, the Omelet Maker can be stored vertically.

PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed
2. The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

