

IMPORTANT! SAFETY INSTRUCTIONS:



READ THIS MANUAL BEFORE USING THIS APPLIANCE.




WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE AND/OR INJURY

- **The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.**
 - **Always check the mains voltage corresponds to the voltage on the rating plate.**
1. Always put the appliance on a flat stable surface before using.
 2. Make sure the voltage of your outlet is the same as the voltage indicated on the appliance's rating label.
 3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
 4. Please do not use any other accessories not supplied with this appliance.
 5. Make sure the whole machine is correctly assembled before using.
 6. During use, do not let the power cord or plug to touch any sharp edge or sources of heat.
 7. Keep the machine away from children during use.
 8. To avoid the risk of personal injury, this machine should not be operate by children or people who are not familiar with these instructions.
 9. This products is only for fruit and vegetables, other food materials may damage the Juicer.
 10. Do not take out the trash collector and juice collector during the machine's operation.
 11. Do not put your hand inside the food pusher during the machine operation.

12. The mesh filter is sharp, do not use hands to clean it directly, a brush or glove is needed.
13. Do not keep open the machine without loading. Any abnormal use is also forbidden
14. Do not use this machine with high fibre food, nuts or ice.
15. When first using there will be a light smell coming from the appliance. This smell will disappear after a short period of use.
16. Always unplug the appliance before cleaning.
17. Do not immerse the main housing (with electrical parts) in any liquid during cleaning. Only use a soft & damp cloth to clean.
18. This appliance is not intended for use by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Do not allow children to use this appliance
20. Do not use the appliance if the rotating sieve is damaged.
21. Switch off the appliance and disconnect from supply before changing accessories or parts.
22. Please ensure the food contact components are cleaned thoroughly before use.


KNOW YOUR JUICER

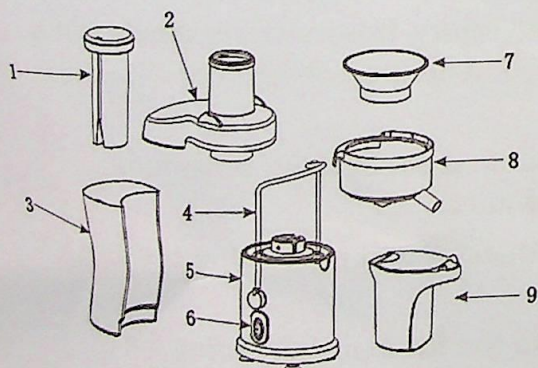

1. Food pusher
2. Upper housing cover
3. Waste collector
4. Lock arm
5. Main housing
6. Switch
7. S.S. mesh filter
8. Mesh filter holder
9. Juice collector

USER INSTRUCTIONS:

1. Put the machine on flat table, switch to "0" position
2. Assemble the filter holder (no.8) on the main housing (no.5) (see the pic1)
3. Assemble the stainless steel mesh filter (no.7) on the drive axis evenly, make sure the filter is assembled in the right place, try to rotate the filter gently to make it move smoothly. (see the pic2)
4. Put the waste collector (no.3) into appointed left side of the machine. (pic 5)
5. Put the upper housing cover (no.2) on the main housing (no.5), use your left hand press the cover and your right hand to lock. (pic4)
6. Put the juice collector on a stable surface, and then plug into the mains outlet.
7. Feed food into the food inlet tube. (pic5)

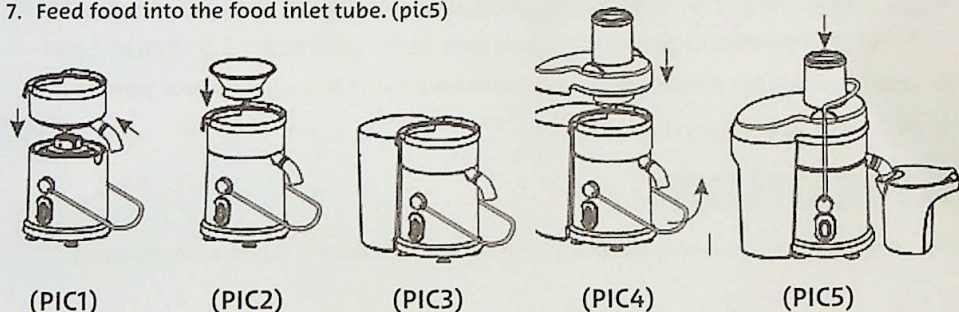

All food should be completely cleaned before feeding into the juicer.

Cut large items into a suitable size to fit into the feeding chute.

For some fruits like watermelon or orange it is best to take off the peel before juicing.

8. Speed Details

"P" Means Pulse

"O" Means Off

"I" Means Lower Speed

"II" Means Higher Speed

FOR REFERENCE:

- A. For fruits with more water source (like watermelon, tomato, orange), it's better to use "I" speed
- B. For fruits with less water source (like apple, pear), it's better to use "II" speed
- C. If not quite sure about the fruits character use "II" speed.

CLEAN AND MAINTAIN

Always clean the juicer thoroughly after use.

Store the machine in a cool dry storage area.


CLEANING METHOD

1. Open the lock arm. Take off the food pusher, upper cover, filter holder, mesh filter, trash collector one by one.
Take off the mesh together with the filter holder, hold on both side of filter holder tightly, and then pull up.
2. Clean out the waste
3. Use clean water to wash food pusher, upper cover, filter holder, mesh filter, trash collector and juice collector.
4. When cleaning the mesh filter, it is recommended to use a brush and wear gloves
5. After wash, use soft dry cloth to dry.


ATTENTION:

Do not immerse any working electrical parts of this appliance in liquid when cleaning.

PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with a UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is a Class 2 appliance protected by double and reinforced insulation and does not require earthing. Class2 appliances are indicated by this  symbol marked on the appliance rating plate.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

 This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

Imported by Benross®



MADE IN P.R.C