

# Instructions

Specification

DC 3V 150mA

Adaptor: AC 220-240V ~ 50Hz

## WARNINGS / IMPORTANT

1. Read the instruction manually thoroughly before using the device.
2. It is recommended for one person use only. For hygienic reason, the attachments should not be shared with others
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Regularly check the blade condition, if damaged or worn replace, failure to do so may cause skin irritation.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. Domestic/ Household use only.
8. Do not place or store your unit or adaptor in direct sunlight. Store only in a cool dry place.
9. Keep your unit out of reach of children as it is not intended for use by children.
10. This appliance is not to be used on, by or near children or invalids.
11. Do not disassemble this device.
12. After cleaning ensure the trimmer is completely dry before using.
13. Do not use in the bath, shower or near water or liquids, this product is not waterproof.
14. If storing for any length of time remove the battery.
15. Before removing the battery the trimmer must be disconnected from the power source.
16. Do not wrap the cord around the trimmer, damage may occur resulting in reduced product performance and possible personal injury.
17. Charge only in a dry area, do not charge in direct sunlight or close to sources of heat.
18. Only handle the appliance with dry hands when using and when charging.
19. Do not let the cord overhang a work surface or unit where it may become entangled and cause injury or damage to the trimmer.

## CHARGING THE TRIMMER

1. Before first use, attach AC adaptor to mains and charge for sixteen (16) hours.
2. Once fully charged, the trimmer can be used for up to 45 minutes.
3. It is recommended to charge the trimmer if you feel a change in the power/item slowing in use.
4. Push the switch to "OFF".
5. Plug the adaptor into the mains socket/supply.

6. Plug the adaptor into the power port of the trimmer.
7. The hair trimmer power indicator light will turn on.
8. Charge for 8 hours.

## **HOW TO USE**

After charging fully, your trimmer is ready to use.

- 1 Initially ensure the switch is pushed to "OFF".
- 2 Check the blade is not damaged and is clean.
- 3 Apply the oil to the blade before each use.
- 4 Attach the position comb to the hair trimmer.
- 5 Adjust the comb to achieve preferred result.
- 6 Push to the switch to "ON".
- 7 Switch off the trimmer after use.

## **TRIMMING WITHOUT THE POSITION COMB**

Trimming without the attachment will trim the hair length to approximately 0.5mm.

Remove the attachment combs before using.

Take care DO NOT press too hard otherwise scalp/personal injury may occur.

## **HOW TO CLEAN**

Clean the appliance after each use to ensure continued performance.

Ensure the trimmer is switched off and not connected to mains power.

DO NOT submerge the unit or comb in liquid.

DO NOT use abrasive liquids or detergents.

Wipe unit with a damp clean cloth, to remove any residue build up, dry thoroughly with a soft dry cloth. DO NOT use direct to heat to dry.

1. Push the switch to "OFF".
2. Remove the position comb.
3. Holding the main body, position your thumb against the blades and push them away from the main body.
4. Remove/brush away any hair trimmings from the blade.
5. Replace the blade after cleaning once all parts are completely dry.