



English

General Description (Fig. 1)

- 1 Protection cap (HC5100 only)
- 2 Cutting unit (cutter and guard)
- 3 Screws
- 4 Adjustment lever
- 5 On/off-switch
- 6 Click-on combs
- 7 Hair comb (HC5100 only)
- 8 Scissors (HC5100 only)
- 9 Cleaning brush
- 10 Clipper oil

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the appliance and the mains cord dry (Fig. 2).

Warning

- This symbol means that the appliance is double-insulated (Fig. 3).

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user

- maintenance shall not be made by children without supervision.
- If the mains cord is damaged, you must have it replaced by

- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The appliance is suitable for mains voltages ranging from 220 to 240 volts.

Using the appliance

Note: Make sure your hair is clean and dry. Do not use the appliance on freshly washed hair.

Tips & tricks

- To clip in the most effective way, move the appliance against the direction of hair growth.
- Since hair grows in different directions, you need to move the appliance in different directions (upwards, downwards or across).
- Make overlapping passes over the head to ensure that the appliance catches all hairs that need to be cut.
- Make sure that the flat part of the hair clipping comb is fully in contact with the scalp to obtain an even clipping result.
- If you wish to shape contours, tilt the appliance.
- Regularly remove cut hair from the hair clipping comb. If a lot of hair has accumulated in the comb, remove it from the appliance and blow and/or shake the hair out of it.

Detaching and attaching click-on combs

- 1 To detach a comb from the cutting element, push the hook at the back of the comb upwards, then unhook it at the front (Fig. 4).
- 2 To attach a comb onto the cutting element, hook it onto the front of the cutting element and push it down at the back (click) (Fig. 5).

Preparing for use

Use the adjustment lever on the left side of the appliance to set the desired hair length. Move the adjustment lever upwards to reduce the cutting length and move it downwards to increase the cutting length. When you hear a click, you have reached the next length setting (Fig. 6).

Switching the appliance on and off

- 1 To switch on the appliance, push the on/off-slide upwards (Fig. 7).
- 2 To switch off the appliance, push the on/off-slide downwards (Fig. 7).

Clipping with click-on comb

- 1 Place the desired comb onto the appliance (click) (Fig. 5).
- 2 Switch on the appliance (Fig. 7).
- 3 Place the comb on the scalp and move the appliance through the hair slowly.

Comb sizes	Comb sizes in mm	Comb sizes in inches
3	1/8	
6	1/4	
9	3/8	
12	1/2	
16 (HC5100 only)	5/8 (HC5100 only)	
19 (HC5100 only)	3/4 (HC5100 only)	
25 (HC5100 only)	1 (HC5100 only)	

Clipping without click-on comb

You can use the appliance without click-on comb to clip your hair very close to the skin or to shape specific areas.

- 1 Detach the click-on comb (Fig. 4).
- 2 Switch on the appliance (Fig. 7).
- 3 To obtain an even clipping result, place the appliance flat on the skin. Move the appliance slowly and smoothly.

Shaping

- 1 Detach the click-on comb (Fig. 4).
- 2 Switch on the appliance (Fig. 7).
- 3 To shape contours, turn the appliance and

Storage

Put the protection cap on the appliance to prevent damage (HC5100 only).

Replacement

Replace the cutting unit if it is damaged or worn. Only replace the cutting unit with an original Philips cutting unit (see Ordering accessories).

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU) (Fig. 11).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Español

Descripción general (Fig. 1)

- 1 Tapa protectora (solo modelos HC5100)
- 2 Unidad de corte (cuchilla y protector)
- 3 Tornillos
- 4 Palanca de ajuste
- 5 Interruptor de encendido/apagado
- 6 Peines de fácil montaje
- 7 Peine para el cabello (solo modelo HC5100)
- 8 Tijeras (solo modelo HC5100)
- 9 Cepillo de limpieza
- 10 Aceite para cortapelos

Nota: El cable y la clavija no se muestran.

Introducción

Enhorabuena por la adquisición de este producto, y bienvenido a Philips. Para sacar el mayor partido a la asistencia que Philips le ofrece, registre el producto en www.philips.com/welcome.

Información de seguridad importante

Antes de utilizar el aparato y sus accesorios, lea atentamente esta información importante y consúltela por si necesitara consultarla en un futuro. Los accesorios suministrados pueden variar según los diferentes productos.

Peligro

- Mantenga el aparato y el cable de alimentación secos (Fig. 2).

Advertencia

- Este símbolo significa que el aparato tiene doble aislamiento (Fig. 3).

- Este aparato puede ser usado por niños a partir de ocho años y por personas con su capacidad física, psíquica o sensorial reducida y por quienes no tengan los conocimientos y la experiencia necesarios, si han sido supervisados o instruidos acerca del uso del aparato de forma segura y siempre que sepan los riesgos que conlleva su uso.

No permita que los niños