

fig. 1

 
 
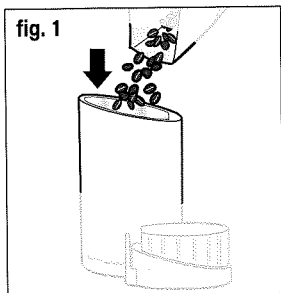 


fig. 2

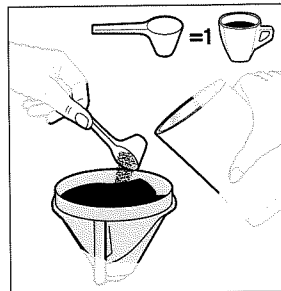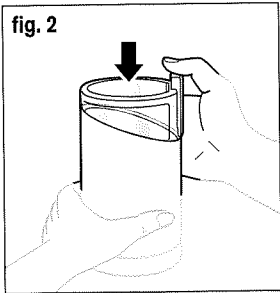

SAFETY INSTRUCTION

- Please read the instructions for use carefully before using your appliance for the first time and retain them for future reference: KRUPS cannot accept any liability for non compliant appliance use.
- Check that your power supply voltage corresponds to that shown on the appliance (alternating current only). Any error in plugging in your appliance may cause irreversible damage and invalidate the guarantee.
- Given the diverse standards in effect, if the appliance is used in a country other than that in which it is purchased, have it checked by an Approved Service Agent.
- Do not use the appliance if it has been dropped and there is visible damage to it (e.g. the protection panel), or if it fails to function normally. In this case, it must be sent to an approved service centre.
- If the power cable is damaged it must be replaced by the manufacturer, an approved service centre or a similarly qualified person, to avoid danger.
- Always unplug the appliance as soon as you stop using it, if you leave it unattended or during assembly, disassembly or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance may be used by persons with a lack of experience and knowledge or reduced physical, sensory or mental capabilities, as long as they are supervised or have been instructed about using the appliance safely and are fully aware of the dangers involved.
- Children should be supervised to ensure they do not play with the appliance and do not use it as a toy.

- Please handle the knife with care when the container is empty and during cleaning, as the blades are very sharp.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capacities, or persons lacking in experience or knowledge, unless they are supervised or have been instructed about using the appliance by a person responsible for their security.
- Your appliance is for domestic culinary use only (for use inside the home only). It has not been designed to be used in the following circumstances, which are not covered by the Guarantee: in kitchen areas reserved for staff in shops, offices and other professional environments, on farms, by clients of hotels, motels and other residential environments and in guest rooms or similar accommodation.
- In the interests of safety, only use KRUPS accessories and spare parts designed for your appliance.
- Warning: Any misuse would lead to potential injury.
- Warning: The appliance must not be immersed in water or any other liquid.

DESCRIPTION

- A - Lid
- B - Motor unit
- C - On/Off button
- D - Blade

USING YOUR APPLIANCE

- Before using the appliance for the first time clean all accessories in hot soapy water (except for the motor unit (B): see Cleaning §).
- Rinse and dry the lid (A) carefully.
- **Ensure that all packaging has been removed before use.**
- Place the motor unit (B) on a flat, stable work surface then plug in your appliance.
- Fill the grinding chamber with coffee beans (1).
- Place the lid (A) onto the motor unit (B). To start grinding, press the On/Off button (C) (2). The power will stay on as long as the On/Off button (C) is pressed.

- You can grind up to 75g of coffee, seeds and dry fruits.
- Do not operate the appliance for more than 20 seconds at a time. Leave the appliance to cool down for one minute before switching it on again.

Caution: wait until the blades have completely stopped before removing the lid (A). The coffee-grinder should be unplugged before removing the lid (A).

CLEANING

- Unplug the appliance before cleaning.
- Wipe the motor unit down (B) with a damp cloth. Dry carefully.
- Do not use scouring pads, acetone, alcohol (spirit) etc. to clean the appliance.
- **Never plunge the motor unit under running water.**
- Clean the grinding chamber with a soft brush.
- **Handle the blades with extreme care as they are very sharp.**

WHAT TO DO IF YOUR APPLIANCE DOES NOT WORK?

- Start by checking the power cord and plug, then check:
- that the lid (A) is properly set onto the motor unit (B).

Your appliance still does not work?

- Contact an approved service centre (see the list in the service booklet).

RECYCLING



Let's all help protect the environment!

- ① Your appliance contains valuable materials which can be recover or recycled.
- ➔ Take it to a local civic waste collection point.