

## USE INSTRUCTIONS AND SAFEGUARDS

- Thank you for choosing KALKO domestic frappe mixer, which is a very reliable tool for your kitchen. You can use it for blending/stirring beverages and liquids such as coffee, milk foam, milkshake, etc.
- It is made of excellent accessories, designed to high resistance in use and with excellent performance.
- It is not intended for processing solid objects (e.g. ice), which may cause damage to the appliance components or the motor.

The mixer attachment is not designed for grinding, crushing or slicing edible or non-edible ingredients but only for blending/stirring edible/potable liquids.

It is easily carried and absolutely safe & harmless, if it is used as intended.

It is necessary to read carefully the following instructions and warnings.

Keep this leaflet in an easy accessible area, for future reference.

Non observance with the use instructions may result in physical damages as well as serious personal injuries.

- Do not operate the appliance for use other than the intended.
- Do not put ingredients (added mixture or other ingredients) in the beaker or the pot when the mixer attachment with the shaft is stirring. Remove the pot, add the ingredients and replace it for stirring.
- Do not fill the stainless steel beaker completely, in order to avoid overflowing during the blending/stirring.
- Place the appliance on a steady, level surface that can bear the weight of the appliance and the mixtures made by it.
- Do not transfer the appliance while in use.
- After each use the appliance and the stainless steel beaker must be cleaned to remove any residues of processed ingredients.
- Cleaning and maintenance of the appliance must be done, only if it is disconnected from the electrical plug.
- Check on a daily basis the condition of the mixture attachment and the shaft.
- Storage of the appliance must be done in a safe place which is not affected by the weather conditions, flood, etc.
- Please avoid installation sites with a lot of moisture or dust, direct exposure to sunlight, near heat sources.

- Make sure to maintain adequate space around the appliance, in order to facilitate the cleaning of the appliance and the installation site, as well as to ensure the immediate and easy access for disconnecting the power cable, if needed.
- During blending/stirring under no circumstances do you place objects (e.g. spoon, straw, etc.) inside the beaker with the preparation.
- When you remove (for cleaning) or replace (after the cleaning) the mixer attachment, make sure to disconnect first the power supply from the appliance.
- The mixture attachment has a M6 thread and it is fitted by screwing it to the shaft thread clockwise, such as a normal. The mixture attachment is removed by unscrewing it counter-clockwise just like a normal screw.
- Do not touch the mixer attachment or the shaft, when the appliance is in use.
- Before any transferring of the appliance, make sure to disconnect it from the power supply and do not lift it from the shaft.
- Do not use any remote control which can start up the appliance automatically.
- Do not attempt to disassemble or modify the appliance.
- There are no components which can be repaired by the user. Do not attempt to follow any maintenance procedure which is not described in this user manual.
- The final preparation must not remain in the stainless steel beaker.
- Pay attention so that the mixer attachment does not hit the beaker walls.
- Disconnect the appliance from the power supply, when not in use, in order to avoid any unintended activation, prior to fitting or removing accessories, prior to cleaning and prior to any maintenance.

#### **ATTENTION!**

**Do not operate the appliance for other than the intended use.**  
**The appliance is not intended for use by or near children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.**

- Children must not play with the appliance.

**Connect only to a grounded plug.**

**Do not remove the ground.**

- The user cleaning and maintenance must not be carried out by children.

- Keep the appliance and the power cable away from children.
- Do not activate the appliance without beaker with the ingredients which are going to be blended.
- Do not place the frappe mixer or the metal beaker on or near heat sources, such as cooking hobs, oven, etc.
- Choose an installation place near a power outlet. The appliance must not be permanently connected to the mains.
- Place the frappe mixer on a steady, level and even countertop, adequately illuminated and ventilated. It should have sufficient dimensions and there should be enough free space around the frappe mixer.

**A power outlet should be near the installation countertop of the frappe mixer.**  
**The countertop should be free from oils and liquids and should be cleaned regularly.**

- Disconnect the appliance from the power supply, when not in use.
- The mixer attachment, the shaft and the beaker of the appliance are suitable for come into contact with foods. Upon cleaning these accessories, hygiene and food rules should be followed.
- Do not use water ejector for cleaning the appliance under pressure.
- Make sure the power cable does not come into contact with surfaces or other appliances that are being heated.
- Do not close the appliance openings. In case such incident occurs, the appliance may be overheated.
- Check periodically the power cable for signs of wear. Do not use the appliance if the power cable or the plug is broken.
- Deactivate the appliance always after use and when not in use.
- Do not use the appliance with wet hands.
- Do not immerse the appliance in water, basins, bathtubs, etc.
- In case the appliance falls into water, disconnect it from the power supply.
- For cleaning the appliance housing, do not use sharp objects or wire, which could cause damage to the materials. Wipe with a soft cloth.
- If the power cable is damaged, it should be replaced by a genuine power cable supplied by the manufacturer or its representatives.

**Do not clean the frappe mixer with water or other liquid ejector.**

- Do not connect the frappe mixer with timer or a circuit which is activated or deactivated regularly by an external device or remote control.
- Do not use extension cable.
- Do not use cable adapter.

- Do not use the appliance after being dropped and shows damages in any part.
- Do not let the power cable hang from the rim of the countertop or table.
- Any repair works, servicing or accessories replacement must be carried out by an authorized service station.

#### OPERATION AND USE

The device has a dual-type switch ON-OFF (0-1-2), which is fitted on the upper part of the appliance. The switch is water proof and isolates phase and neutral when on position OFF.

The appliance operates by pressing the switch into position I or II. The position I corresponds to slow rotation and the position II corresponds to fast rotation.

In any case, after use the appliance must be set to position OFF (deactivated) with the switch on the upper part of the device set to position 0.

**Attention!** A magnetic field is developed near the device. If you are using a cardiac pacemaker and feel discomfort, stay away from the appliance and consult your doctor.

#### CLEANING

- Clean the shaft and the mixer attachment after each use with warm water and dish detergent and rinse with cold water.
- Clean the beaker after each use with warm water and dish detergent and rinse with cold water.
- Clean the outer parts of the device on a daily basis after use with a cloth and warm water. Do not use sharp objects or wire, which could cause damage to the materials of the appliance.

- Prior to cleaning, disconnect the appliance from the power supply; remove the beaker and the mixer attachment. Prevent the water from entering the head or any other part of the appliance.

Model	KDM120P
Weight	1,8 kg
Motor	230V 50Hz 150W
RPM	10000 - 18000 rpm
Switch	ON/OFF
Maximum continuous operation time	3 min
Cup	Stainless steel malt cup, 600 ml
Body construction	ABS plastic 3mm thickness
Manufacturer in Greece	KALCO KALAITZIDIS STYLIANOS OF KONSTANTINOS ARKADIOU KALOCHORI, 57009 ECHEDOROU, THESSALONIKI, GREECE T.0030 2310 735444   kalko@kalko.gr   www.kalko.gr   www.frappes.gr

## ΕΓΓΥΗΣΗ

- Η εγγύηση ισχύει από την ημέρα αγοράς της συσκευής που αναγράφεται στο θεωρημένο δελτίο αγοράς. Έχει ισχύ 2 έτη και βασιζέται στους όρους του παρόντος εντύπου. Θα πρέπει απαραίτητα να συνοδεύεται από την απόδειξη αγοράς ή το τιμολόγιο.
- Η Εταιρεία μέσα στα όρια της εγγύησης, σε περίπτωση βλάβης της συσκευής αναλαμβάνει την υποχρέωση να την επιδιορθώσει και να αντικαταστήσει κάθε τυχόν ελαττωματικό μέρος, εφόσον η ανωμαλία προέρχεται από την κατασκευή και όχι από την κακή χρήση ή κακή μεταχείριση μετά την παράδοσή της στον αγοραστή.
- Κατά την διάρκεια της εγγύησης παρέχονται δωρεάν τα ανταλλακτικά και η εργασία. Κάθε επισκευή εκτελείται στα συνεργεία της Εταιρείας, όπου ο πελάτης πρέπει να μεταφέρει την συσκευή, επιβαρυνόμενος με τα έξοδα μεταφοράς της.
- Οι επισκευές δεν επιφέρουν παράταση του χρόνου εγγύησης. Η εγγύηση παύει να ισχύει σε περίπτωση εκτέλεσης επισκευών, ή επεμβάσεων από πρόσωπα που δεν έχουν εξουσιοδοτηθεί από την Εταιρεία μας.
- Η εταιρεία εγκρίνει την αντικατάσταση της συσκευής, μόνο σε περίπτωση που δεν είναι δυνατή η σωστή αποκατάσταση της βλάβης.
- Οι εργασίες συντήρησης ή επισκευής θα πρέπει να εκτελείται μόνο από εξειδικευμένο τεχνικό προσωπικό με έγκριση του κατασκευαστή. Τα ανταλλακτικά που θα χρησιμοποιηθούν θα πρέπει να είναι εγκεκριμένα από τον κατασκευαστή σε αντίθετη περίπτωση η εγγύηση παύει να ισχύει.
- Σε περίπτωση βλάβης μην προσπαθήσετε να επιδιορθώσετε μόνοι σας, απευθυνθείτε στο service.
- Η εταιρεία μας εγγυάται την καλή κατασκευή και λειτουργία του προϊόντος και την μη ελαττωματικότητα των υλικών
- Η εγγύηση δεν καλύπτει μέρη τα οποία φθείρονται με την καθημερινή χρήση της συσκευής, πχ καρβουνάκια του μοτέρ, λάστιχα/ταιμούχες/ρουλεμάν του μοτέρ, κανάτα/ποτήρι κλπ
- Η εγγύηση δεν καλύπτει τη φθορά από χρήση εκτός αυτής που ορίζεται στον παρόν φυλλάδιο, καθώς και χρήση σε ακραίες συνθήκες.

## WARRANTY

- The warranty valid from the date of purchase of the appliance, as stated on the certified receipt. The warranty valid 5 years based on the terms of this document. Must accompany by the proof of receipt or the invoice.
- The Company within the warranty limits, undertakes the responsibility to repair and to replace any defective part, in case of damage as long as it is a manufactory defect and not misuse or abuse after delivery to the customer.
- During the warranty period, the spare parts and the repair labor are provided free of charge. Each repair is carried out at the service station of the Company, where the customer must deliver the appliance, burdened with the transportation costs.
- The repairs do not extend the warranty duration. The warranty ceases to be valid in case of repairs or tampering by persons non-authorized by our Company.
- The Company approves the product replacement, only in case it is not possible to restore the damage.
- The maintenance or repair labor must be carried out only by authorized service personnel, approved by the manufacturer. The spare parts that are going to be used for the repair must be genuine and approved by the manufacturer, otherwise the warranty ceases to be valid.
- In case of damage, do not attempt to repair it yourself. Please apply to the authorized service.
- Our company guarantees the good construction and operation of the product as well as the non-faultiness of the materials.
- The warranty does not cover the parts that are being worn with the daily use of the appliance, e.g. motor sealings/gaskets/bearings, beaker/glass, etc.
- The warranty does not cover any use other than the one described in this manual, as well use under extreme conditions.

## European Directive 2002/96 on WEEE

<p>Στην συσκευή έχει τοποθετηθεί αυτό το σήμα ακολουθώντας την Ευρωπαϊκή οδηγία 2002/96/EC για τα Ηλεκτρικά και τα Ηλεκτρονικά απορρίμματα (WEEE).</p> <p>Με την ορθή ανακύκλωση του προϊόντος, θα βοηθήσετε στην μείωση των πιθανών αρνητικών συνεπειών της ρύπανσης του περιβάλλοντος και της ανθρώπινης υγείας, η οποία μπορεί να προκληθεί από την ακατάλληλη διαχείριση των απορριμμάτων.</p> <p>Το σήμα επάνω στο προϊόν συμβολίζει το γεγονός ότι αυτό το προϊόν δεν θα πρέπει να θεωρηθεί σαν ένα συνηθισμένο απόρριμμα. Αντιθέτως θα πρέπει να παραδοθεί στο κατάλληλο σημείο συλλογής και ανακύκλωσης ηλεκτρικού και ηλεκτρονικού εξοπλισμού.</p> <p>Η διάθεση θα πρέπει να πραγματοποιηθεί σύμφωνα με τις τοπικές περιβαλλοντικές διατάξεις για την ανακύκλωση των απορριμμάτων.</p> <p>Για περισσότερες πληροφορίες σχετικά με την διαδικασία συλλογής και ανακύκλωσης του προϊόντος απευθυνθείτε στην τοπική αυτοδιοίκηση, στην εταιρία ανακύκλωσης ή στο κατάστημα από το οποίο προμηθευτήκατε την συσκευή.</p>	<p>This symbol is fitted on the appliance for compliance with the European Directive 2002/96/EC regarding the Electric and Electronic waste.</p> <p>By properly recycling the product, you will help reduce the potential negative effects on environmental pollution and human health, which may be caused by improper waste handling.</p> <p>The symbol on the product indicates the fact that this product should not be considered an ordinary waste. Instead, it should be delivered to the appropriate collection and recycling point of electrical and electronic equipment.</p> <p>Disposal should be carried out in accordance with the local environmental provisions regarding the waste recycling.</p> <p>For additional information regarding the collection and recycling procedure of the product, please apply to the local municipality, to the recycling company or to the purchase store.</p>
---	--

